


Stage 4 Replacement Instructions

(2) Stage 4 (AC+DI)


- 1 When the "Autoclave Water Quality" alarm beeps and lights up red, unscrew the first two Stage 4 cartridges.



Dispose of cartridges
in regular trash
disposal

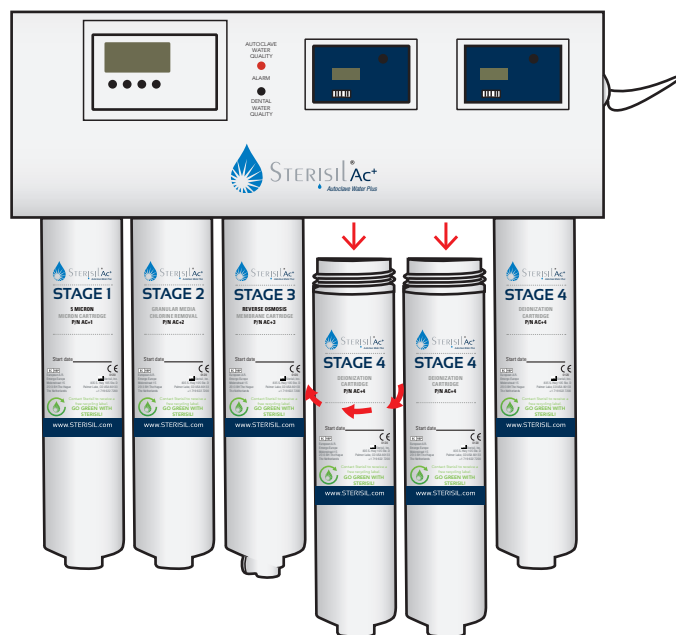

- 2 Slide the right Stage 4 cartridge to the left furthest Stage 4 slot.

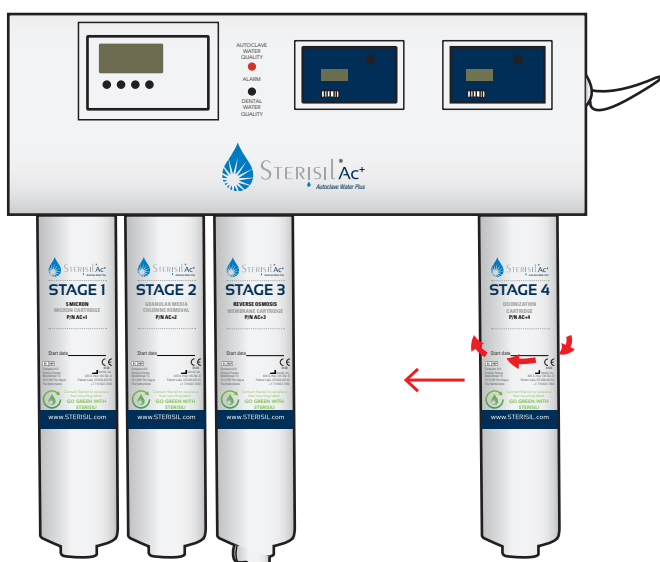

- 3 Insert two new Stage 4 cartridges in the right

