


# Stage 4 Replacement Instructions

## (2) Stage 4 (SS-DI)


- 1 When the "Autoclave Water Quality" alarm beeps and lights up red, unscrew the left Stage 4 cartridge.



Dispose of cartridge  
in regular trash  
disposal

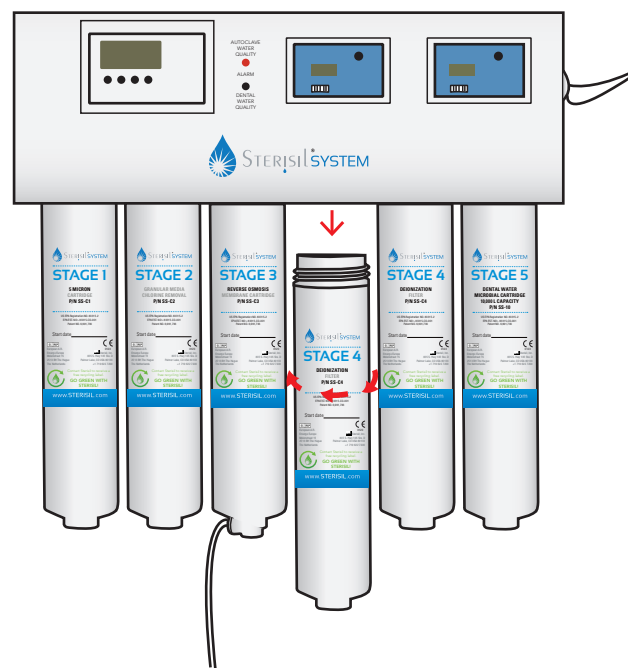

- 2 Slide the right Stage 4 cartridge to the left

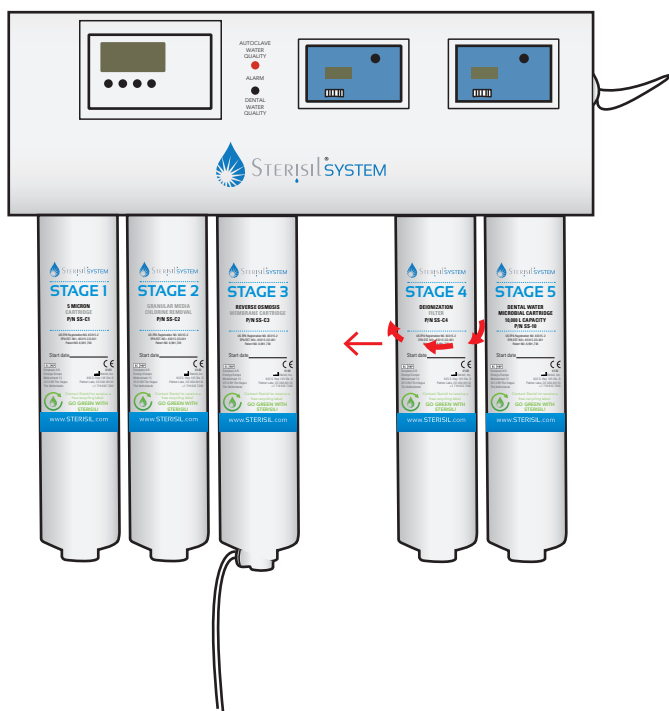

- 3 Insert new Stage 4 cartridge in the right position.

