



## **GCX®** Alarm Mounting Bracket Assembly

For proper use, consult GCX Corporation installation guide(s). www.gcx.com

REF 8208G GCX Corporation Alarm Mounting Bracket Assembly




Note: Use Allen wrench provided for tightening into place.

Modular Services Alarm Mounting Bracket Assembly

For proper use, consult Modular Services Company installation guide(s). www.modularservices.com


REF 8208H Modular Services Company Alarm Mounting Bracket Assembly

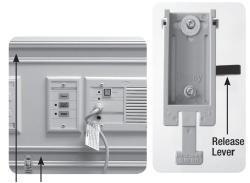

Headwall Rails for Mounting Brackets

Hill-Rom Alarm Mounting Bracket for horizontal wall mounts

**BEF 8208HR** Hill-Rom Alarm Mounting Bracket

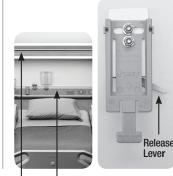



Headwall Rails for Mounting Brackets

Posey Company • 5635 Peck Road, Arcadia, CA 91006-0020 USA Phone: 1.800.447.6739 • 1.626.443.3143 • Fax: 1.800.767.3933 • www.posey.com

. . . . . . . . . . . .

© 2015 Posey Company. All rights reserved.

M6160 REV C 120815

## **Posey<sup>®</sup> Alarm Mounting Brackets** Application Instructions



## GCX® Alarm Mounting Bracket Assembly

For proper use, consult GCX Corporation installation guide(s). www.gcx.com

REF 8208G GCX Corporation Alarm Mounting Bracket Assembly



Note: Use Allen wrench provided for tightening into place.

Modular Services Alarm Mounting Bracket Assembly

For proper use, consult Modular Services Company installation guide(s). www.modularservices.com

REF 8208H Modular Services Company Alarm Mounting Bracket Assembly



REF 8208HR Hill-Rom Alarm Mounting Bracket



Headwall Rails for Mounting Brackets





Headwall Rails for Mounting Brackets

Posey Company • 5635 Peck Road, Arcadia, CA 91006-0020 USA

Phone: 1.800.447.6739 • 1.626.443.3143 • Fax: 1.800.767.3933 • www.posey.com